

FENDER FLARE INSTALLATION INSTRUCTION

CHEVROLET 1500 C/K 88-98 • BLAZER/JIMMY F/S 92-94


SUBURBAN/YUKON 2D 92-99 • TAHOE 2D 95-99

Item No. 1ABFK00018 (Pocket Style)

Parts


Qty (1) Fender Flare Left Front (LF)
Qty (1) Fender Flare Left Rear (LR)
Qty (1) Fender Flare Right Front (RF)
Qty (1) Fender Flare Right Rear (RR)

Pre-Installation

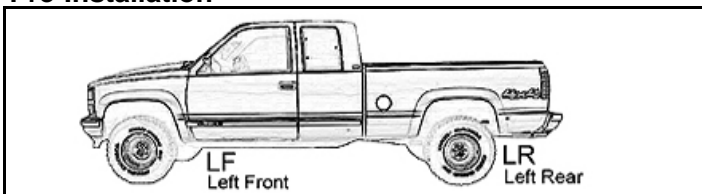

Prefit both driver (left) and passenger (right) side fender flare to the vehicle, and ensure the fitment before painting or installation. You may remove any moldings, strips or existing flares from the vehicle for fitting and installation.


Cleaning

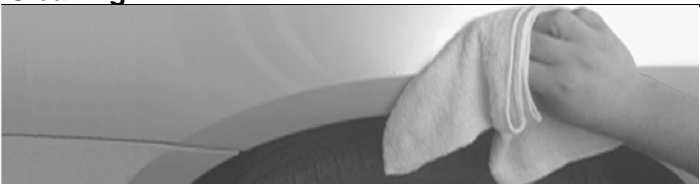

Wash and wipe dry the areas of contact on the vehicle body. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

Qty (1) Rubber Seal (enough for four flares's outer edge)
Qty (12) U-Clamp with Flat Head Screw
Qty (8) J-Clip
Qty (34) Allen Bolt, Nut & Washer (Torx Bit required)
Qty (8) Self Tapping Screw (see **optional B**)

Painting(optional A)

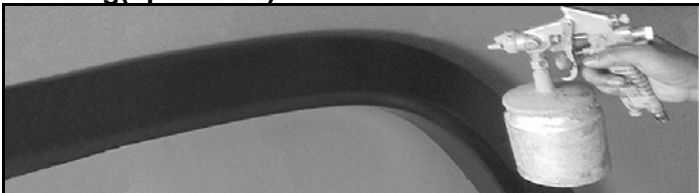

Professional painter or body shop are recommended, follow the paint manufacturer specifications to paint the flares. Clean fender flare surfaces with clean water & a mild detergent before painting. **Do not use lacquer thinner or any solvent based products.**

Apply Rubber Seal




Remove 1 inch tape liner from rubber seal, apply it on the flare, start at one end & along the edge that comes in contact with body panel. **Caution: 3M tape will stick on the inside of the flare.** Make sure the rubber seal along the edge well, and rip the tape liner off gradually, apply pressure on the tape in the same time to ensure that it adheres well. Trim excess rubber seal and so on.

Installation (Left Front Flare Shown)



1. Use Torx Bit to tight allen bolt & nut firmly on every pocket of the fender flares. **DO NOT OVER TIGHTEN !**
2. Place the flare on the vehicle with **right position**.
3. Appl 3 J-Clips into the mounting slot in flare and secure it to the vehicle. Apply 2 U-Clamps, and secure it into the hole with flat head screw, as shown.

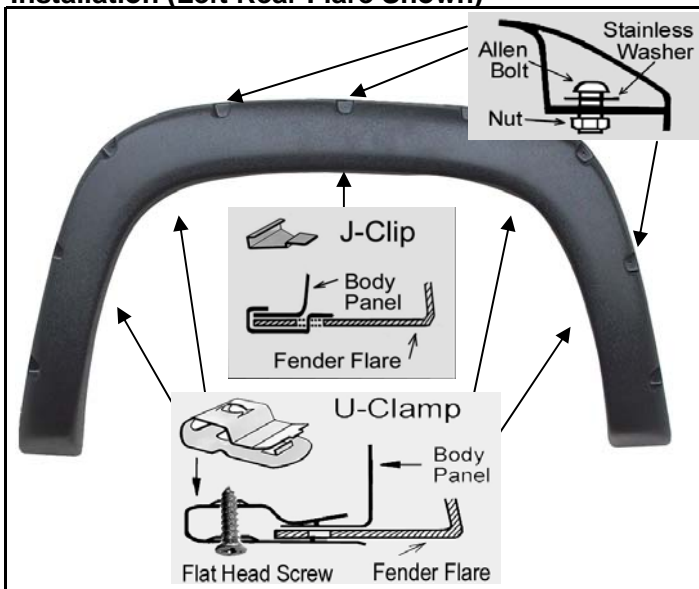

1. Use Torx Bit to tight allen bolt & nut firmly on every pocket of the fender flares. **DO NOT OVER TIGHTEN !**
2. Place the flare on the vehicle with **right position**.
3. Appl 1 J-Clips into the mounting slot in flare and secure it to the vehicle. Apply 4 U-Clamps, and secure it into the hole with flat head screw, as shown.

Optional B : Use the included self tapping screw to secure the flare to the fender when it be needed in special condition.

All rights reserved by original. No part of this publication may be reproduced.