

# FENDER FLARE INSTALLATION INSTRUCTION

FORD F-150 09-14


Item No. 1ABFK00035 (Pocket Style)

## Parts

Qty (1) Fender Flare Left Front (LF)  
Qty (1) Left Front Inner Piece(LF-L)  
Qty (1) Fender Flare Left Rear (LR)  
Qty (1) Fender Flare Right Front (RF)  
Qty (1) Right Front Inner Piece(RF-R)  
Qty (1) Fender Flare Right Rear (RR)


Qty (1) Rubber Seal(enough for four flares's outer edge)  
Qty (2) U-Clip & Flange Type-D Screw  
Qty (8) Long Clip & Truss Type-A Screw  
Qty (8) Plastic Fastener  
Qty (34) Allen Bolt, Nut, Washer(Torx Bit required)  
Qty (8) Self Tapping Screw(see **optional B**)

## 1. Pre-Installation

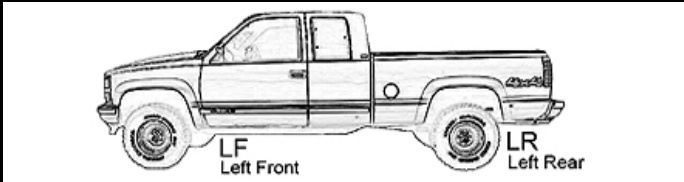

Prefit and ensure both left(driver side) and right(passenger side) hand fender flare to the vehicle before painting or installation. You may remove any moldings, strips or existing flares from the vehicle for fitting and installation.

## 3. Cleaning

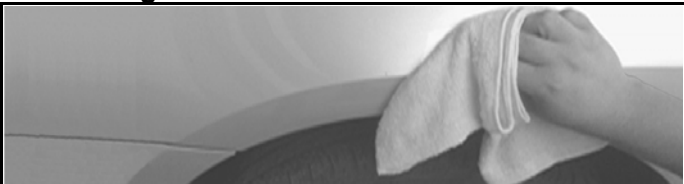


Wash and wipe dry the areas of contact on the vehicle body. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

## 5. Installation (Left Front Flare Shown)




1. Remove the three existing factory screws with proper wrench and save two screws for reinstallation as shown.

## 7. Installation (Left Front Flare Shown)

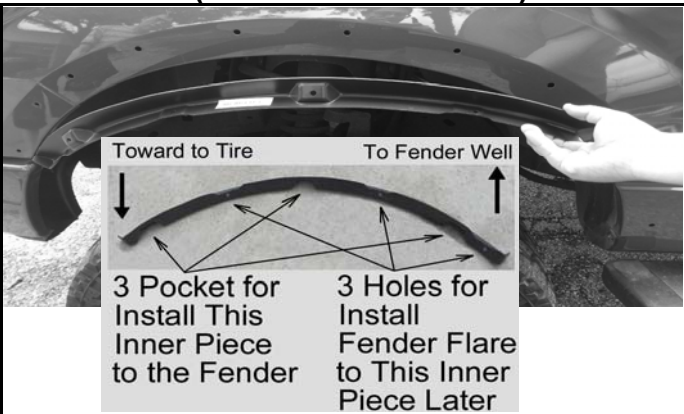


1. Ensure to have the right inner piece and knowing the way to install first. (0313-LF-L for left side)

## 2. Painting(optional A)

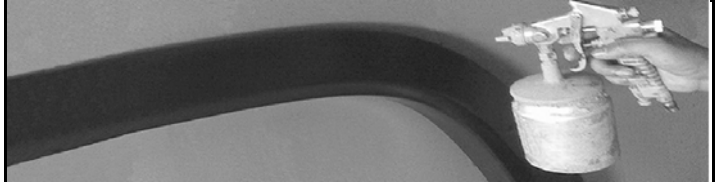


Hire a professional painter or body shop and follow the paint manufacturer specifications to paint the flares. Clean all fender flares surfaces with clean water and a mild detergent before paint, do not use lacquer thinner or any solvent based products.

## 4. Apply Rubber Seal

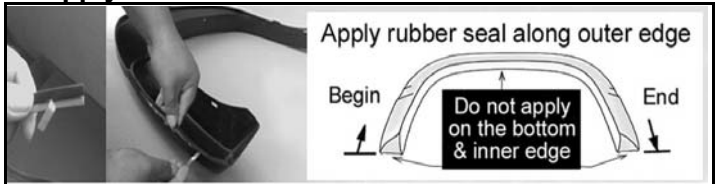


Remove 1 inch tape liner from rubber seal, apply it on the flare, start one end & along the edge that comes in contact with body panel. **Caution: 3M tape will stick on the inside of the flare.** Make sure the rubber seal along the edge well, and rip the tape liner off gradually, apply pressure on the tape in the same time to ensure that it adheres well. Trim excess rubber seal and so on.

## 6. Installation (Left Front Flare Shown)

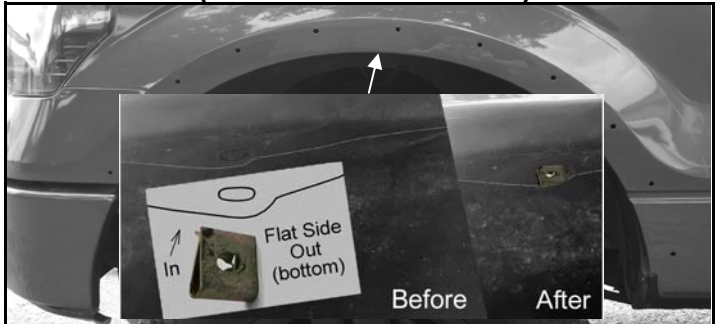


1. Install a U-Clip over existing factory uppermost hole on the fender well lip, apply it from inner out and flat face down.

## 8. Installation (Left Front Flare Shown)

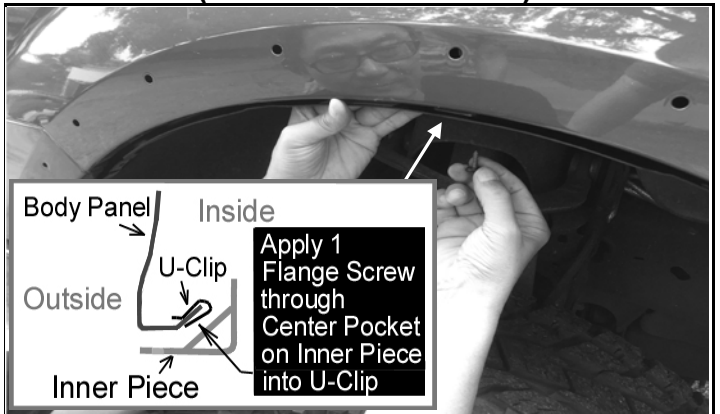

1. Apply one Flange Screw through inner piece, into U-Clip & secure it to the vehicle on the uppermost hole, as center shown.  
2. Apply plastic fastener while install the fender flare later

### 9. Installation (Left Front Flare Shown)

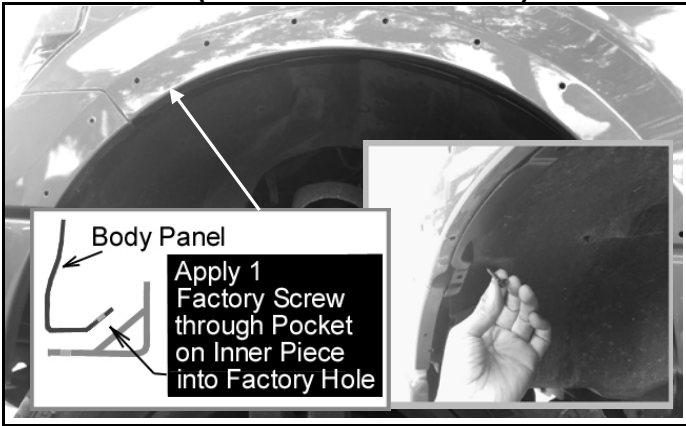

### 10. Installation (Left Front Flare Shown)

