

Support Bracket Installation Instructions

Items included in this bag:


- 1 Un-mounted Bolt
- 3 Mounting Nuts
- 1 LH (or RH) Support Bracket
- This instruction manual

Required tools for this installation:


- 10mm Socket Wrench
- Monkey Wrench

This manual is intended for the following vehicles:


- Cadillac Escalade 1999-2000
- Chevy C/K Pickup (Classic Body Style) 1988-2000
- Chevy Suburban 1992-1999
- Chevy Tahoe 1995-1999
- Chevy Tahoe Limited 2000
- GMC C/K Pickup 1988-1998
- GMC Suburban 1992-1999
- GMC Yukon 1992-1999
- GMC Yukon Denali 2000

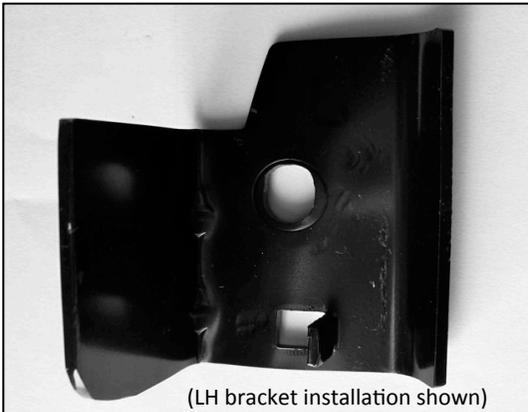

This support bracket is designed to minimize mirror vibration as the door was not originally designed for this towing mirror.

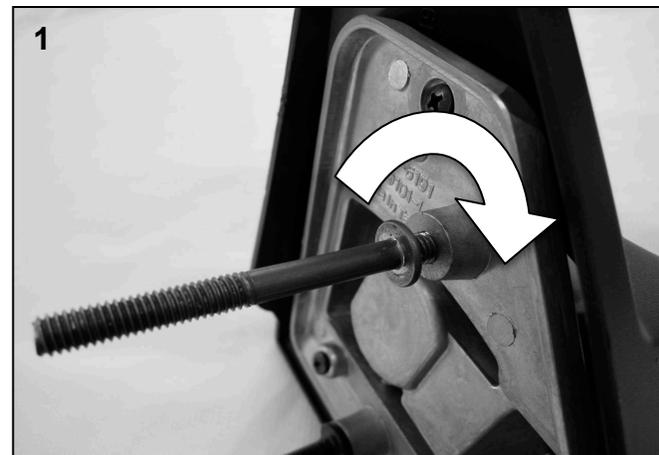

1. Tighten the un-mounted bolt to the mounting base on the top corner with a monkey wrench [IMPORTANT: Don't over-tighten the bolt to avoid damaging the thread] [NOTE: RH mirror installation will be identical, but mirrored.]
2. 2 nuts on the bottom of the mounting base need to be tightened first.

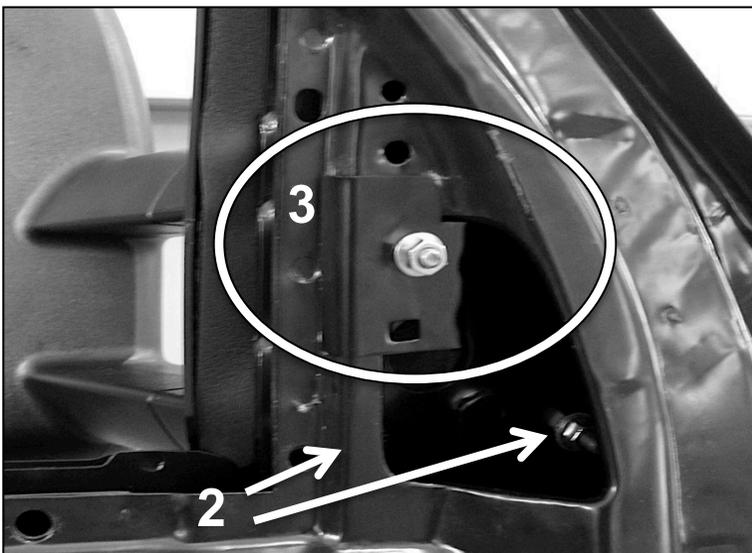

3. Then, insert the correct-side bracket into the upper long bolt as shown and tighten the nut. You will notice that the bracket bends inward a bit. This is normal and it means that the bracket can now do its job to minimize vibration by holding against the door structure tightly.
4. Follow thru with plug connection (if available), then replace door panels, plastic moldings, and trim pieces to finish installation.