

FENDER FLARE INSTALLATION INSTRUCTION

CHEVROLET TAHOE 4 DOOR 00-06 • GMC YUKON 4 DOOR 00-06


Item No. 1ABFK00010 (Rugged Style)

Parts

- Qty (1) Fender Flare Left Front (LF)
- Qty (1) Fender Flare Left Rear (LR)
- Qty (1) Fender Flare Right Front (RF)
- Qty (1) Fender Flare Right Rear (RR)
- Qty (1) Rubber Seal(enough for four flares's outer edge)


- Qty (6) Y-Clip
- Qty (6) Plastic Cap and Plastic Ring
- Qty (12) Flange Type-B Screw
- Qty(22) Plastic Expanding Fastener
- Qty (8) Self Tapping Screw(see optional B)

1. Pre-Installation

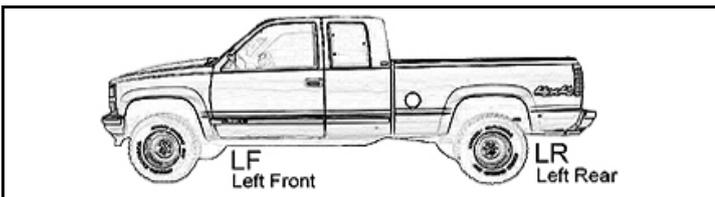


Prefit and ensure both left(driver side) and right(passenger side) hand fender flare to the vehicle before painting or installation. You may remove any moldings, strips or existing flares from the vehicle for fitting and installation.

3. Clean Vehicle Body & Fender Flare

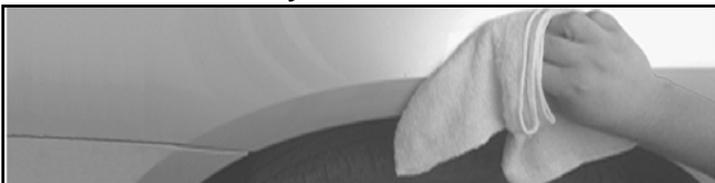


1. Wash and wipe dry the areas of contact on the vehicle body.
2. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

5. Installation for All Style (Left Front Flare Shown)

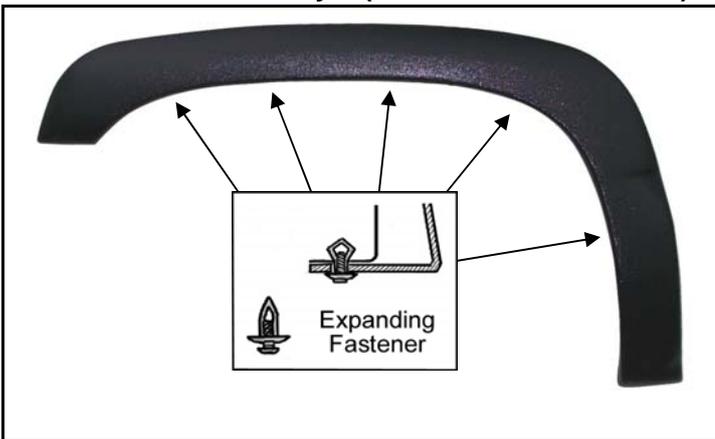


1. Place the flare on the vehicle with **best position**.
2. Apply 5 Plastic Fastener into the mounting slot in flare and secure it to the vehicle.(see illustration)

2. Paint Flare(Optional)

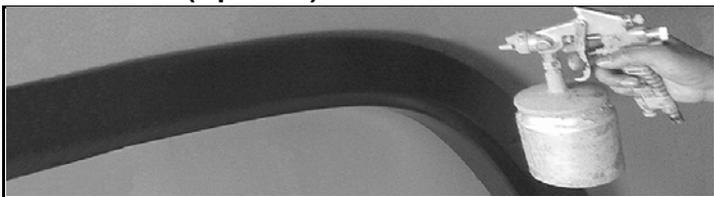


1. Hire a professional painter or body shop and follow the paint manufacturer specifications to paint the flares.
2. Clean all fender flares surfaces with clean water and a mild detergent before paint, do not use lacquer thinner or any solvent based products.

4. Apply Rubber Seal

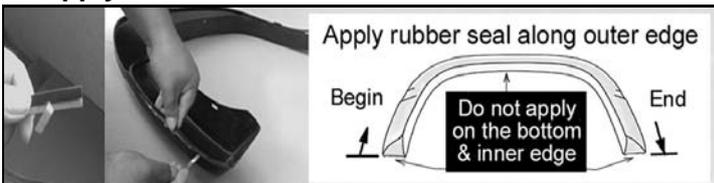

Remove 1 inch tape liner from rubber seal, apply it on the flare, start one end & along the edge that comes in contact with body panel. **Caution: 3M tape will stick on the inside of the flare.** Make sure the rubber seal along the edge well, and rip the tape liner off gradually, apply pressure on the tape in the same time to ensure that it adheres well. Trim excess rubber seal and so on.

6. Installation for All Style (Left Rear Flare Shown)

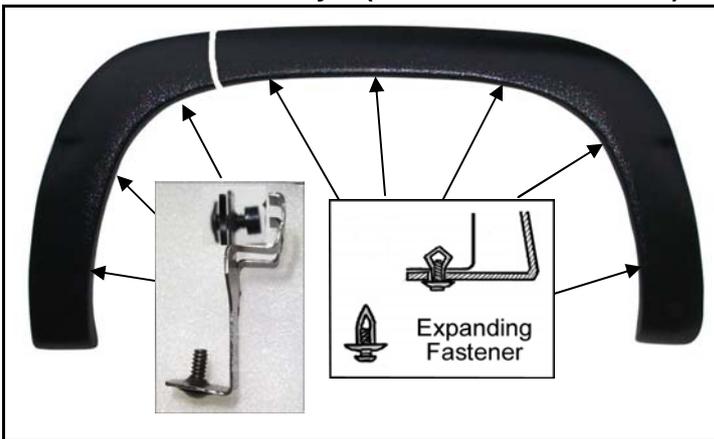

1. Place the flare on the vehicle with **best position**.
2. Apply 5 Plastic Fastener into the mounting slot in large part of flare and secure it to the vehicle.(see illustration)
3. Mount 3 sets of Y-Clip with flange type-B screw, plastic ring and cap on the door part of flare, and secure it to the vehicle.

Optional B: The included self tapping screw may be used for extra secure if needed.

All rights reserved by original. No part of this publication may be reproduced.