



Turn Signal Installation Instruction

Items included in this bag:

1 LH & 1 RH Turn Signal Lens
4 Replacement Bulbs
This Instruction Manual

Required tools for this installation:

Flat Screwdriver

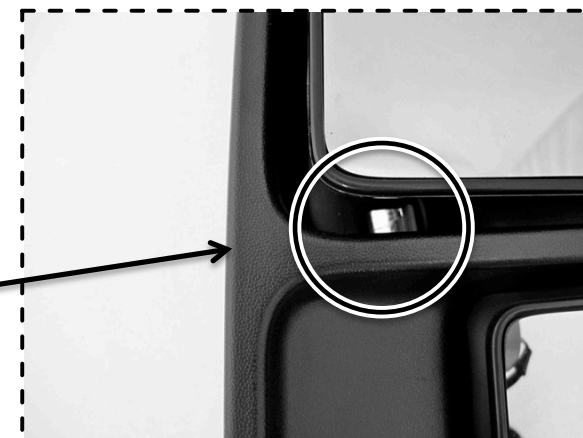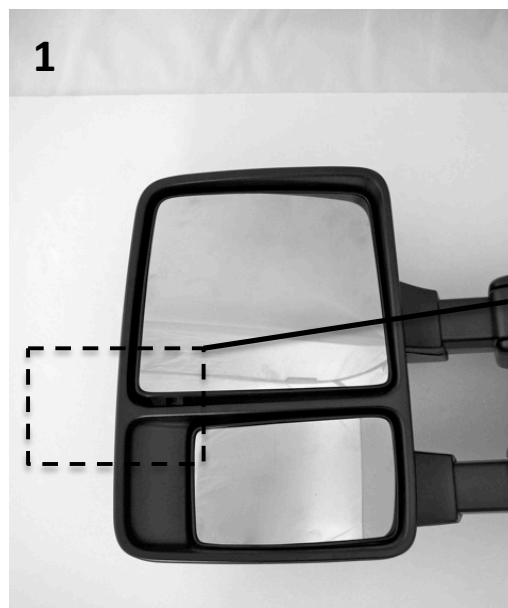


1. (Note: You don't have to remove the glass or the mirror assembly from the truck to complete this installation.) Pull the glass holder up from this corner to see the silver plastic tab underneath. (LH mirror is used in

in this installation, RH will be identical but mirrored.)




2. Using a flat screwdriver, push the tab into the turn signal to release the turn signal lens.

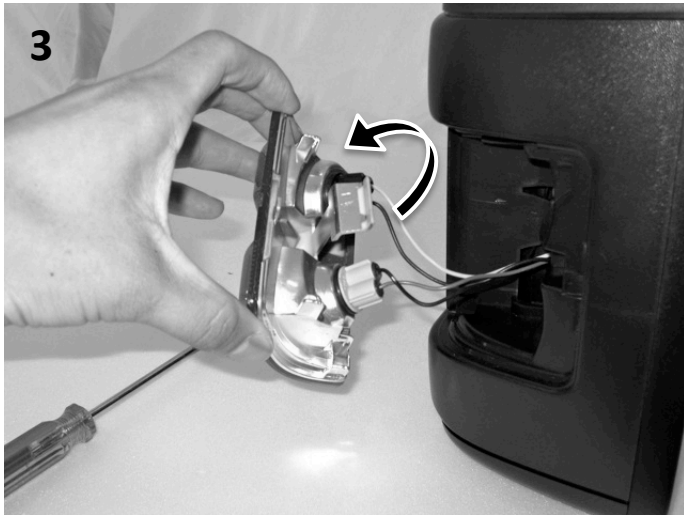

3. Twist the 2 bulb sockets counterclockwise to gain access to the bulbs and to detach the lens. (Tips: Use a pair of pliers to help you twist off the sockets if they are too tight.)

4. Replace with the included new bulbs if your original bulbs are not working. Fasten the sockets into the new replacement lens. (Tips: The sockets are made idiot-proof and will only fit into the correct slot, so don't force twisting the sockets into the locking position.)

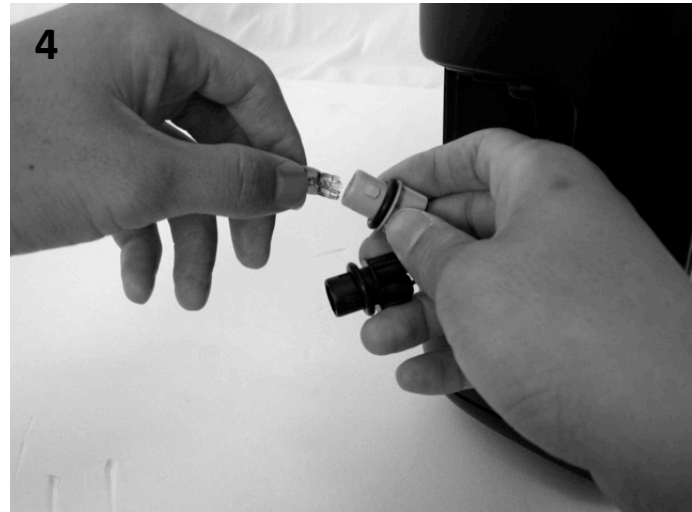

5. Tuck the excess wires into the housing cavity and push the lens back into the mirror housing. You should hear a snap when the lens is locked. Pull on the lens to check the lens is attached securely. Do the same on the RH mirror to complete the installation.