

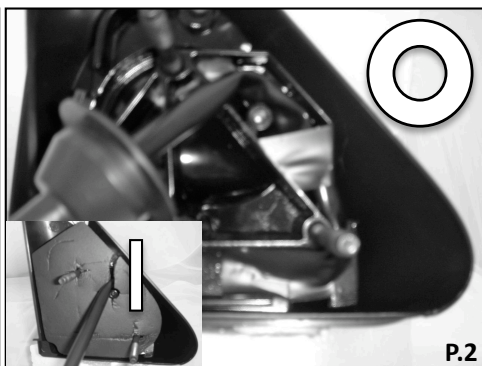
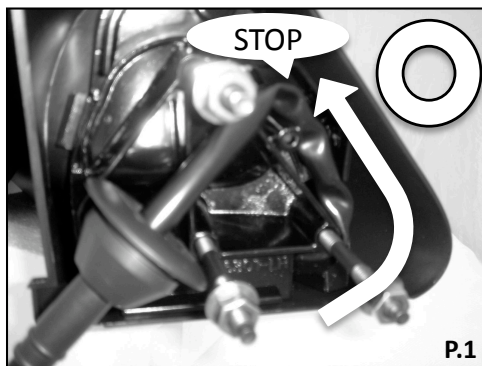


## **- Important Installation Notice -** **Correct Harness Routing**

- Please route harness correctly thru the pre-designated ditch on the mounting base to avoid pinched harness. Pinched harness can result in an electrical short.

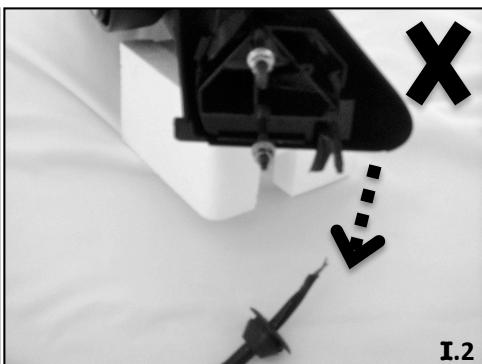

**Correct Routing:** (Photo 1) Remove foam pad and route the harness thru the pre-designated ditch up to the point where the harness enter into the door panel and STOP. (Photo 2) Duct tape can be used to avoid the harness from moving during installation. Cut foam pad along the drawn WHITE line to accommodate the harness for a perfect fit.

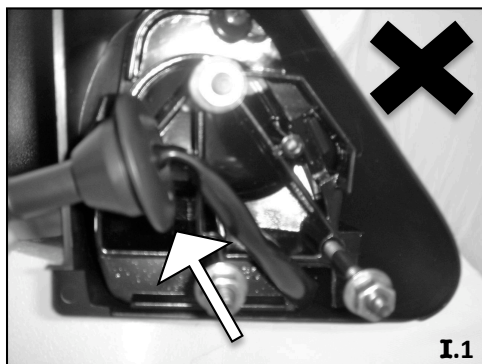

**Incorrect Routing:** (Image 1) If the harness are run over the bottom rib of the mounting base you will pinch and cut the harness when tightening the nuts. (Image 2) Pinched harness shown.

*Thank you and happy installing!*